

Local variable

Command	Data type	Description	PS	AX	RW	Range
M_SSEC_LOCVR_LV0_DAT(x)	T_DOUBLE	Local variable (Level0) (x=1 to 33)	O	--	R	
M_SSEC_LOCVR_LV1_DAT(x)	T_DOUBLE	Local variable (Level1) (x=1 to 33)	O	--	R	
M_SSEC_LOCVR_LV2_DAT(x)	T_DOUBLE	Local variable (Level2) (x=1 to 33)	O	--	R	
M_SSEC_LOCVR_LV3_DAT(x)	T_DOUBLE	Local variable (Level3) (x=1 to 33)	O	--	R	
M_SSEC_LOCVR_LV4_DAT(x)	T_DOUBLE	Local variable (Level4) (x=1 to 33)	O	--	R	
M_SSEC_LOCVR_EMPTY_VAL	T_DOUBLE	Local variable empty variable	O	--	R	