

MSTB execution status

Command	Data type	Description	PS	AX	RW	Range
M_SSEC_MSTBE_M_COD	T_LONG	M command/Manual numerical command (M1)	--	--	RW	±9999999(BCD)/±99999999
M_SSEC_MSTBE_M2_COD	T_LONG	M command/Manual numerical command (M2)	--	--	RW	±9999999(BCD)/±99999999
M_SSEC_MSTBE_M3_COD	T_LONG	M command/Manual numerical command (M3)	--	--	RW	±9999999(BCD)/±99999999
M_SSEC_MSTBE_M4_COD	T_LONG	M command/Manual numerical command (M4)	--	--	RW	±9999999(BCD)/±99999999
M_SSEC_MSTBE_S_COD	T_LONG	M command/Manual numerical command (S1)	--	--	RW	±99999999
M_SSEC_MSTBE_S2_COD	T_LONG	M command/Manual numerical command (S2)	--	--	RW	±99999999
M_SSEC_MSTBE_S3_COD	T_LONG	M command/Manual numerical command (S3)	--	--	RW	±99999999
M_SSEC_MSTBE_S4_COD	T_LONG	M command/Manual numerical command (S4)	--	--	RW	±99999999
M_SSEC_MSTBE_S5_COD	T_LONG	M command/Manual numerical command (S5)	--	--	RW	±99999999
M_SSEC_MSTBE_S6_COD	T_LONG	M command/Manual numerical command (S6)	--	--	RW	±99999999
M_SSEC_MSTBE_T_COD	T_LONG	M command/Manual numerical command (T1)	--	--	RW	±9999999(BCD)/±99999999