

Program tree

Command	Data type	Description	PS	AX	RW	Range
M_SSEC_TREE_MAIN_DEV	T_LONG	Name of main device in execution	O	--	R	
M_SSEC_TREE_MAIN_O	T_STR	Main O No. in execution	O	--	R	
M_SSEC_TREE_MAIN_N	T_LONG	Main N No. in execution	O	--	R	
M_SSEC_TREE_MAIN_B	T_LONG	Main B No. in execution	O	--	R	
M_SSEC_TREE_SUB_DEV(x)	T_LONG	Sub 1 to 10 device name in execution (x=1 to 10)	O	--	R	
M_SSEC_TREE_SUB_O(x)	T_STR	Sub 1 to 10 O number in execution (x=1 to 10)	O	--	R	
M_SSEC_TREE_SUB_N(x)	T_LONG	Sub 1 to 10 N number in execution (x=1 to 10)	O	--	R	
M_SSEC_TREE_SUB_B(x)	T_LONG	Sub 1 to 10 B number in execution (x=1 to 10)	O	--	R	
M_SSEC_TREE_SUB_L(x)	T_LONG	Sub 1 to 10 number of times of repetition (x=1 to 10)	O	--	R	
M_SSEC_TREE_PROG_LIST	T_BUFF	Program tree information in execution (ONB) displayed program name	O	--	R	
M_SSEC_TREE_PROG_LIST2	T_BUFF	Program tree information in execution (ONB) internal program name	O	--	R	
M_SSEC_TREE_PROG_LIST_PATH(x)	T_STR	Program path information (X=1 to 2) *Prohibited to be used from HMI	O	--	R	